

This diagram shows an exploded perspective view of a dishwasher assembly. The main body of the dishwasher is labeled 1. It features a control panel 4 with a handle and a digital display. Inside the main body, there is a lower rack 2 and an upper rack 29. A lower cutlery tray 5 is shown in an exploded position, with its front edge 3 and base 20. The tray has a grid of slots 21 and a central divider 24. A handle 27 is attached to the front of the tray. The tray is shown being inserted into the lower rack 2. The lower rack 2 has a front edge 28 and a base 22. The upper rack 29 has a front edge 21 and a base 22. A handle 30 is attached to the front of the upper rack. The diagram illustrates the assembly of the lower cutlery tray into the lower rack of the dishwasher.

FIG. 2

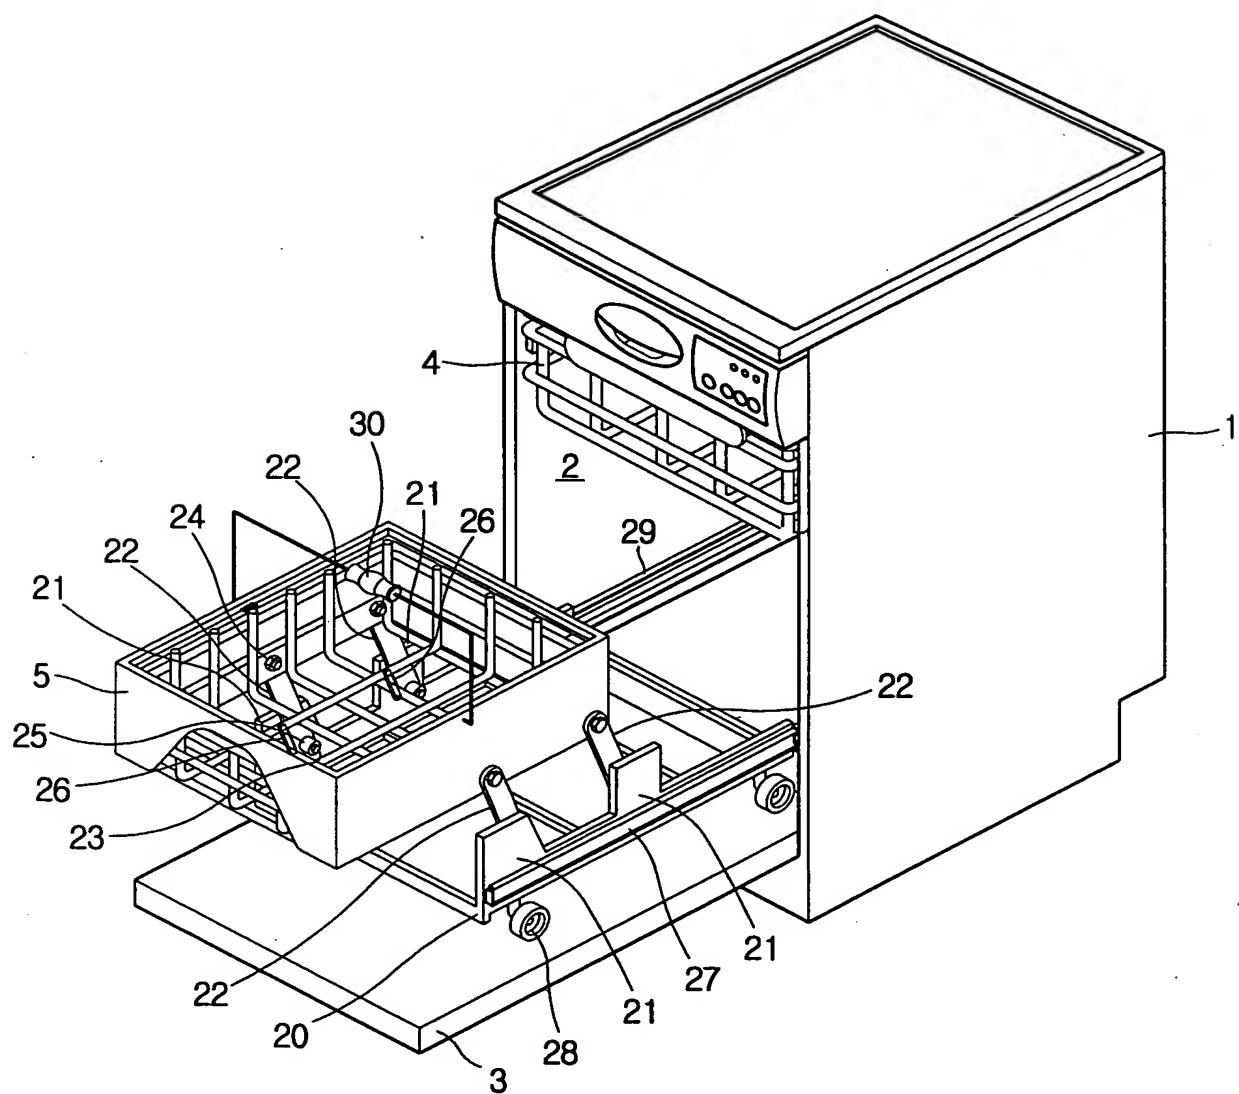


FIG. 3

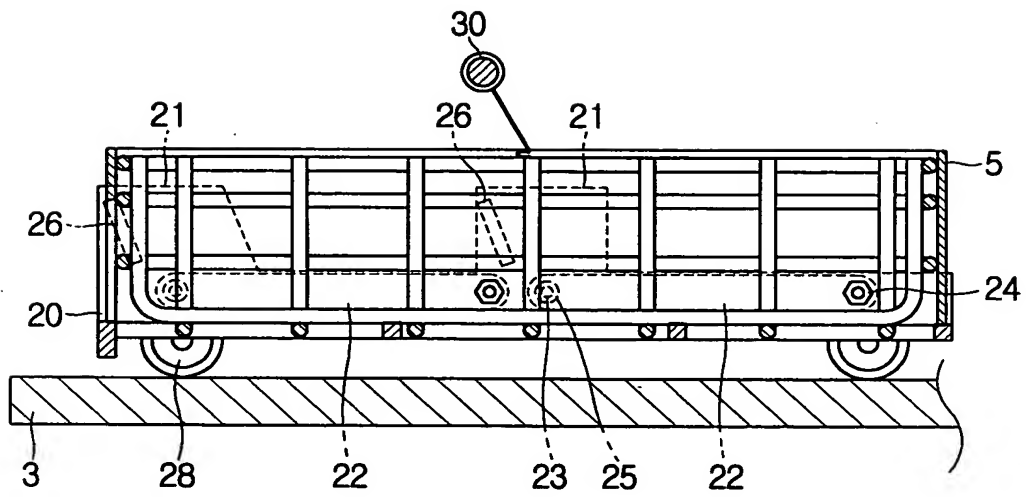


FIG. 4

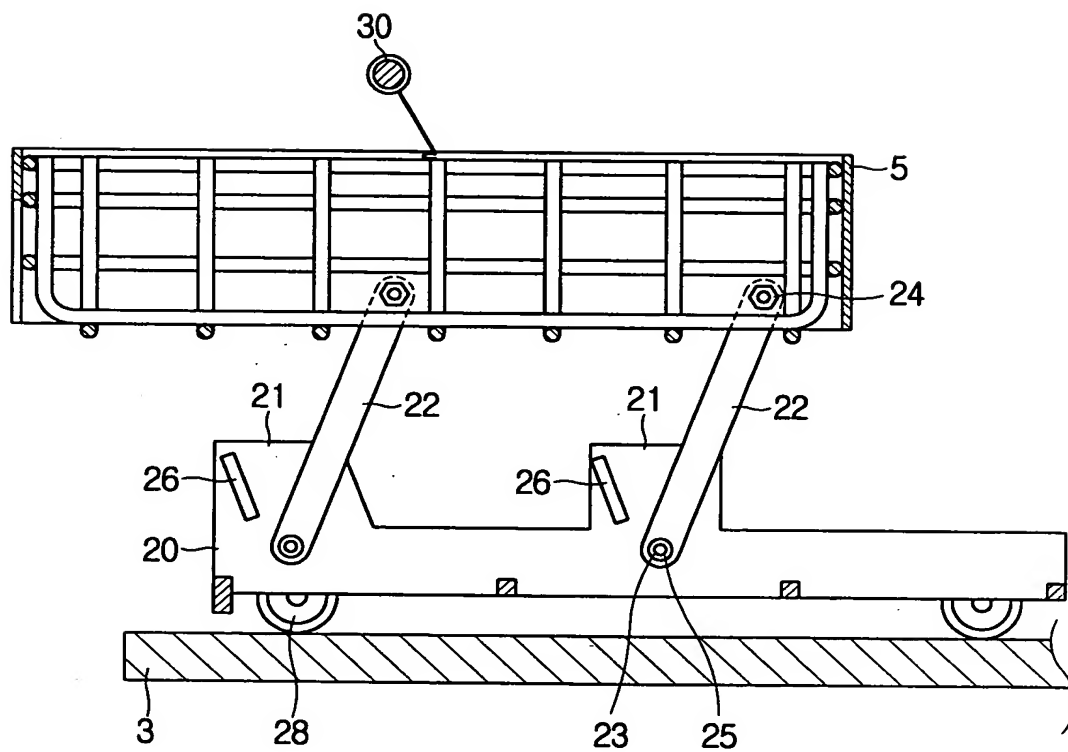


FIG. 5

